



# How to Pair the Wall Control and Remote Control

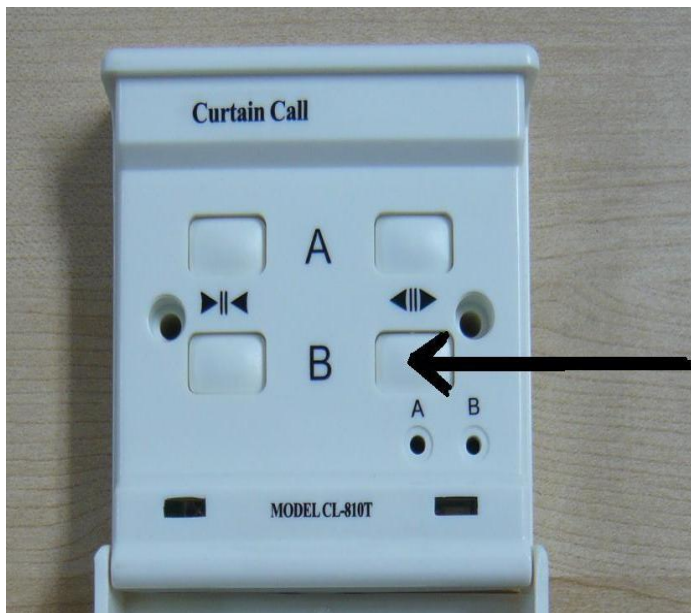

On the Wall Control,

## Step 1

press and hold a few seconds on this button until you hear a beep (or the red light comes on), then release it.

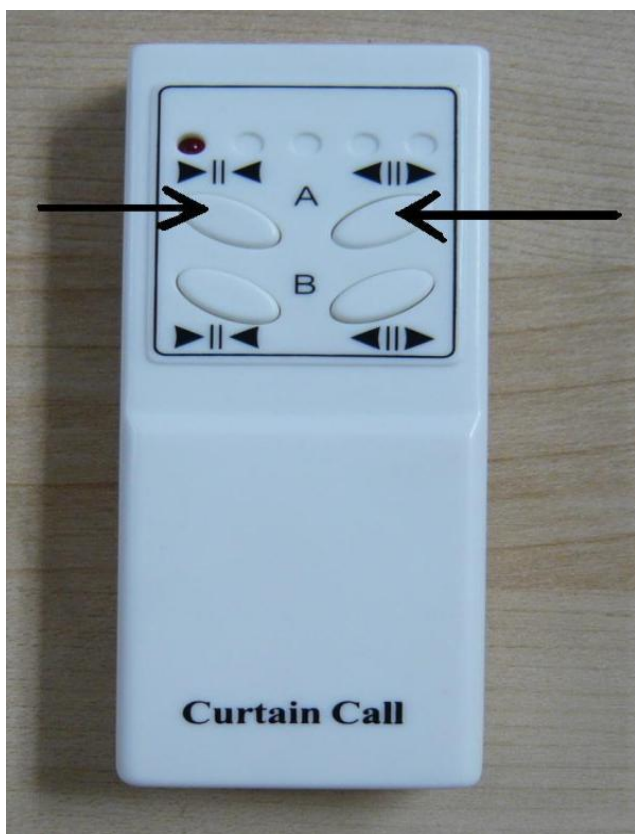

On the Remote Control,

## Step 2

Press these 2 buttons one by one in turn few times till the Motor turns.

(by pointing the Remote Control to the Wall Control)

- It is done.

(if you have a 1-to-5 Remote Control, you may select a channel# by pressing the "S" button on the Remote Control first, then pair them as above.)