


# Remote Controlled Roller Shade System III

## Operation Instructions:

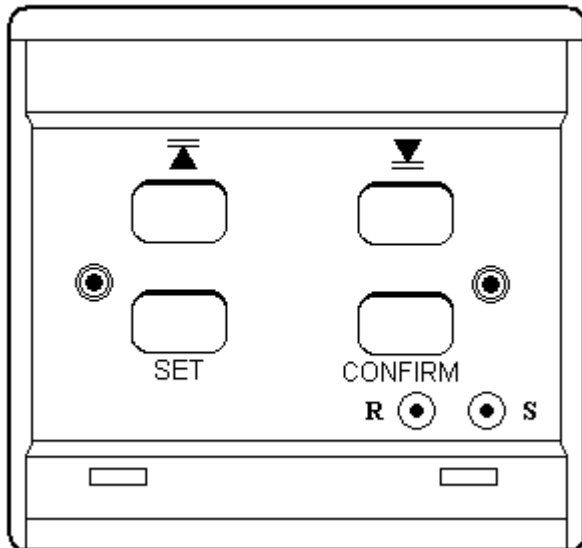

### Note

Power must be off when plug in or unplug the White Cable to/from this Wall Control.

- (1) ▼ is the button for moving down and to stop the shade.
- (2) ▲ is the button for moving up and to stop the shade.

## Setting downward stop and upward stop positions

- (a) Downward stop position **MUST** be set first.
- (b) Press the SET button for 6 seconds till the **red** light is flashing and release the button.
- (c) Press the ▼ button, the shade will go down till to the desired position and press the same ▼ button again to stop the shade.
- (d) Press the CONFIRM button to confirm the downward stop position.
- (e) Press the ▲ button, the shade will go up till to the desired position and press the same ▲ button again to stop the shade.
- (f) Press the CONFIRM button to confirm the upward stop position.  
The **red** light will change to **green** light and stop flashing.  
The setting is completed now.

## Changing the Rolling Direction

- (a) Use a small stick to press the button R⊙ for few seconds till the **red** light is flashing, then press button S⊙ till the **red** light is changed to **green**. The setting is completed.