

## **Simplified Guide to Set Limits of Rolling Blind (Kallox CL-338T)**

(The 'Motor' must be inserted into the 'aluminum rod' first before it can be programmed, (otherwise, the "motor" will not function due to sensor protection)

**1. Plug the "Control Pad" into the "Motor" where the "jack" is next to lights.**

### **2. Lower Limit**

- Press "**Set**" 6 times (red light underneath the motor will be on)
- Press **Open** "<" once while the red light is on, blind starts rolling down.
- At the position you would like to stop :
  - press "**Stop**" and hold
  - Simultaneously, press **Open**"<" and hold
  - keep holding both "**Stop**" and **Open**"<" till the red light is off.
- Lower limit is set when the red light is off.

### **3. Upper Limit**

- Press "**Set**" 6 times
- Press **Close** ">" once while the red light is on, blind starts rolling up.
- At the position you would like to stop :
  - press "**Stop**" and hold
  - Simultaneously, press **Close**">" and hold.
  - keep holding both "**Stop**" and **Close**">" till the red light is off.
- Upper limit is set when the red light is off.

### **4. Channel**

- Press "any #" (e.g. 8) you would like on the Remote Control
- Press "**Set**" 6 times
- Press "**Set**" and "<" at the same time and hold both buttons.
- Hold till the red light is off, the channel is set.

**Note:** 1. Any one of the Lower Limit, Upper Limit and Channel can be re-set any time.

2. To erase all of memory from the motor: Press "Set" 6 times, Press "Set" and "Stop" at the same time and hold both buttons for 10 seconds. Repeat once.

3. For more details and group control, please refer to the original manual.