

Simplified Guide to Set Limits of Rolling Blind (Kallox CL-338T)

(The 'Motor' must be inserted into the 'aluminum rod' first before it can be programmed, (otherwise, the "motor" will not function due to sensor protection)

1. Plug the "Control Pad" into the "Motor" where the "jack" is next to lights.

2. Lower Limit

- Press "**Set**" 6 times (red light underneath the motor will be on)
- Press **Open** "<" once while the red light is on, blind starts rolling down.
- At the position you would like to stop :
 - press "**Stop**" and hold
 - Simultaneously, press **Open**"<" and hold
 - keep holding both "**Stop**" and **Open**"<" till the red light is off.
- Lower limit is set when the red light is off.

3. Upper Limit

- Press "**Set**" 6 times
- Press **Close** ">" once while the red light is on, blind starts rolling up.
- At the position you would like to stop :
 - press "**Stop**" and hold
 - Simultaneously, press **Close**">" and hold.
 - keep holding both "**Stop**" and **Close**">" till the red light is off.
- Upper limit is set when the red light is off.

4. Channel

- Press "any #" (e.g. 8) you would like on the Remote Control
- Press "**Set**" 6 times
- Press "**Set**" and "<" at the same time and hold both buttons.
- Hold till the red light is off, the channel is set.

Note: 1. Any one of the Lower Limit, Upper Limit and Channel can be re-set any time.

2. To erase all of memory from the motor: Press "Set" 6 times, Press "Set" and "Stop" at the same time and hold both buttons for 10 seconds. Repeat once.

3. For more details and group control, please refer to the original manual.