



# How to Pair the Remote Control and Wall Control

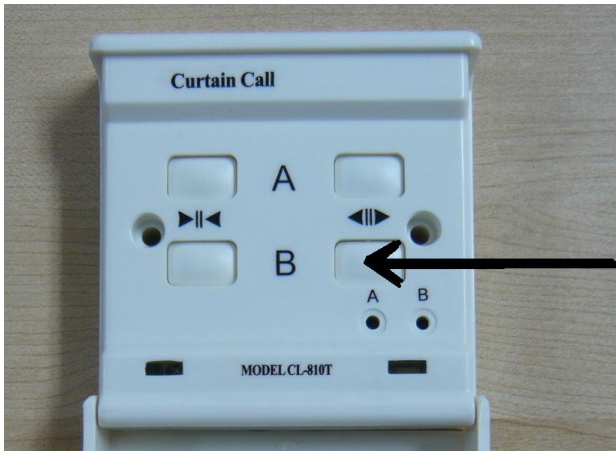

**Press and hold this button a few seconds till it beeps once (or red light is on)**

**(release it as soon as it beeps or red light is on)**

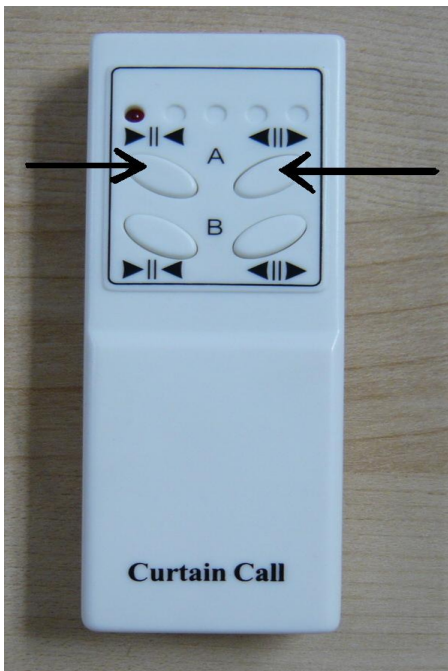

**Press the “A” Open or Close button in turn back and forth 4 to 5 times, or till the Motor turns.**

**(the Remote must point to the Wall Control)**

(if you have a 1-to-5 Remote Control, please select a channel# by pressing the “S” button on the Remote Control first, then pair them.)