



How to Pair the Remote Control and Wall Control

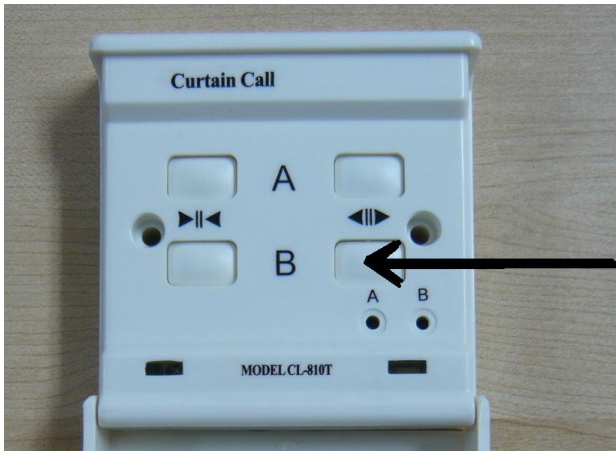

Press and hold this button a few seconds till it beeps once (or red light is on)

(release it as soon as it beeps or red light is on)

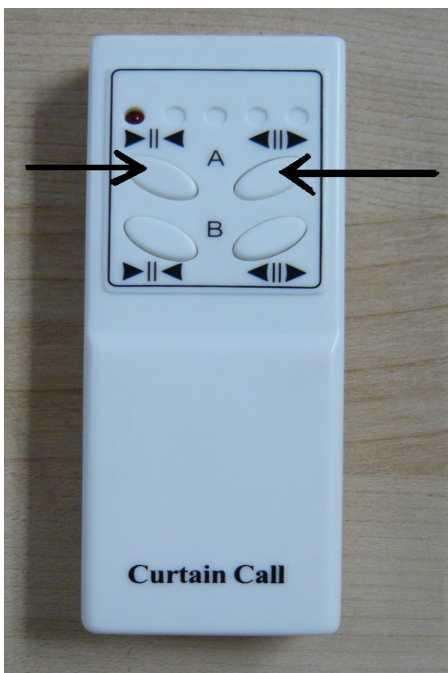

Press the “A” Open or Close button in turn back and forth 4 to 5 times, or till the Motor turns.

(the Remote must point to the Wall Control)

(if you have a 1-to-5 Remote Control, please select a channel# by pressing the “S” button on the Remote Control first, then pair them.)