



1. Select Channel in **Remote Control**
2. On the **Wall Control**, Keep pressing "PROGRAM/CODE" button until "STOP" button flashes
3. On the **Wall Control**, press the flashing "STOP" button once  
(for 2-Channel Wall Control, select the one you want to use)
4. Press Remote Control "OPEN" button

Done.

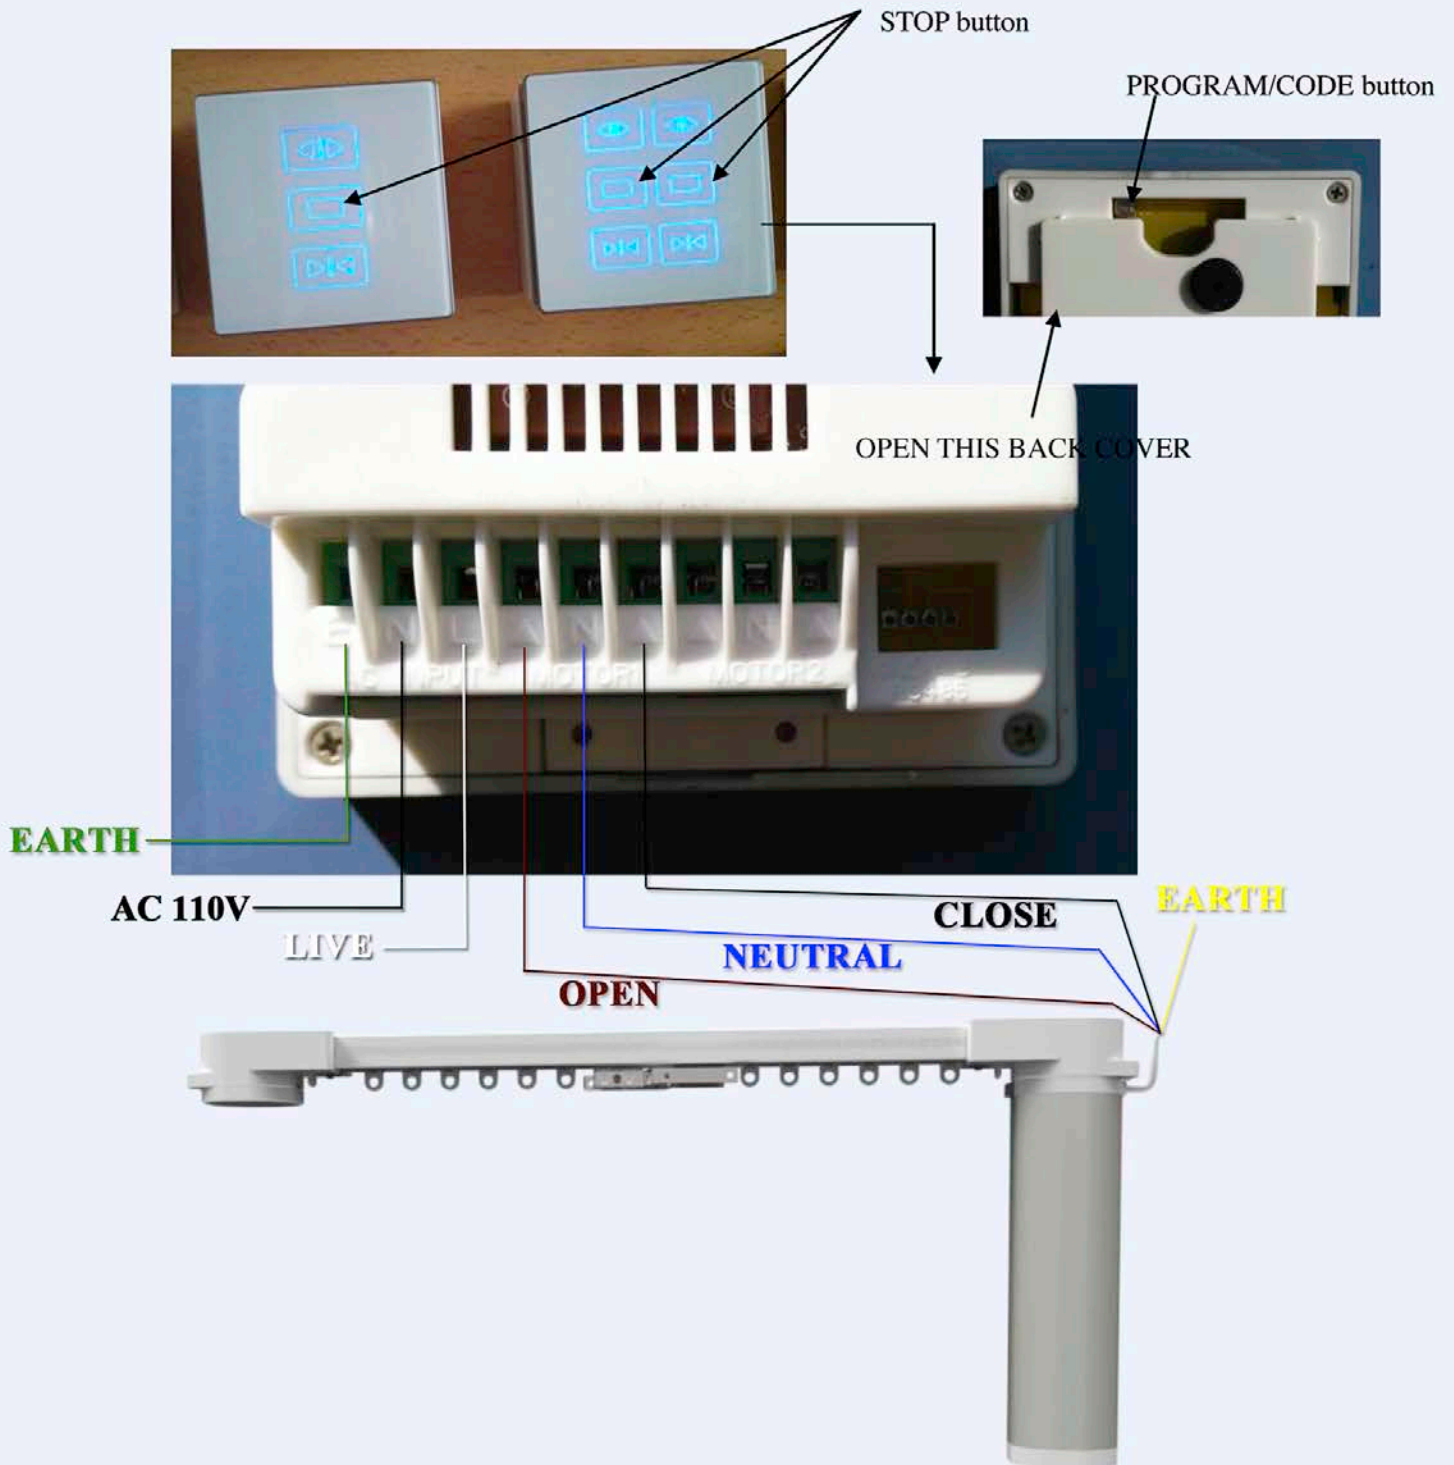

## How to open the back cover

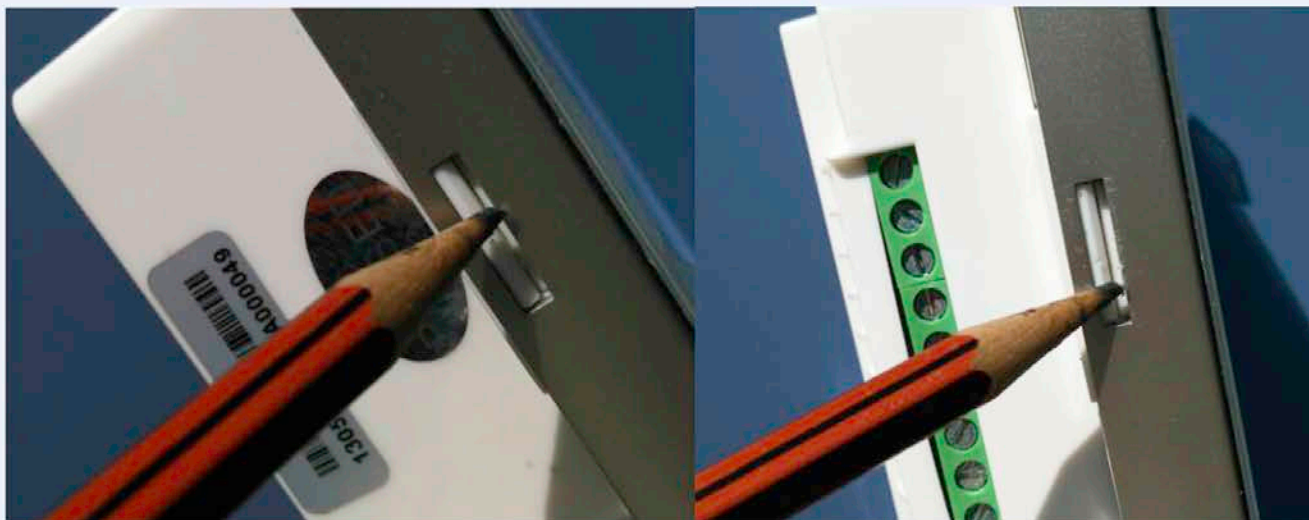

There are spring locks in the two sides of the Wall Control. Push both the spring locks slightly, then take the main part out to separate the back cover and the main part. You will see the PROGRAM/CODE button on the main part.

The End