



How to Pair the Remote Control and Wall Control

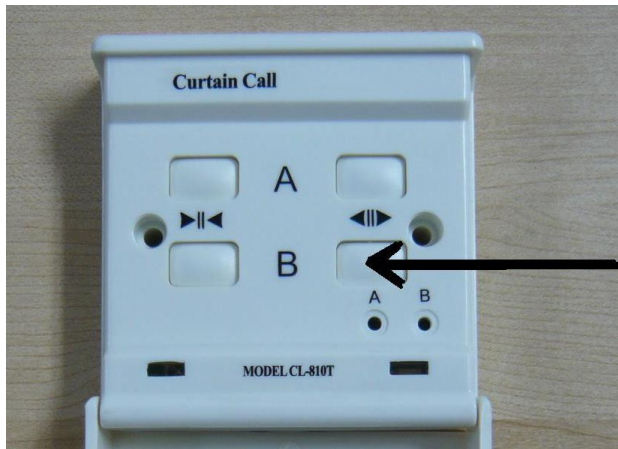

**Press and hold this button a few seconds till it beeps once.
(release it as soon as it beeps once)**

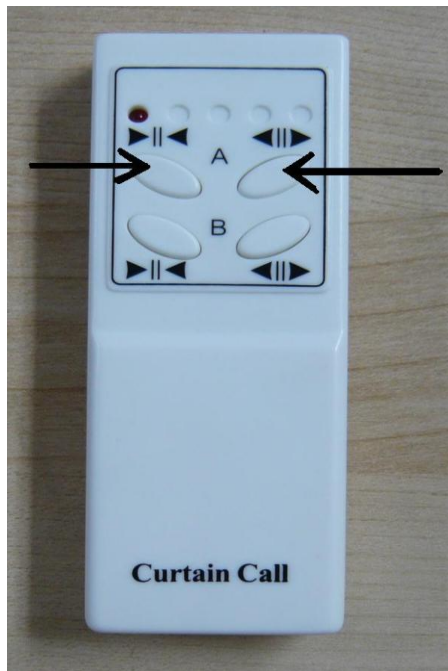

Press the “A” Open and Close button in turn back and forth 4 to 5 times, or till the Motor turns.

(the Remote must point to the Wall Control)

(if you have a 1-to-5 Remote Control, please select a channel# by pressing the “S” button on the Remote Control first, then pair them.)