


PowerCurtain the Roller Shade RL-200 System

(Please read this guide first before programming the system)

Step 1 Disconnect Power for 30 seconds

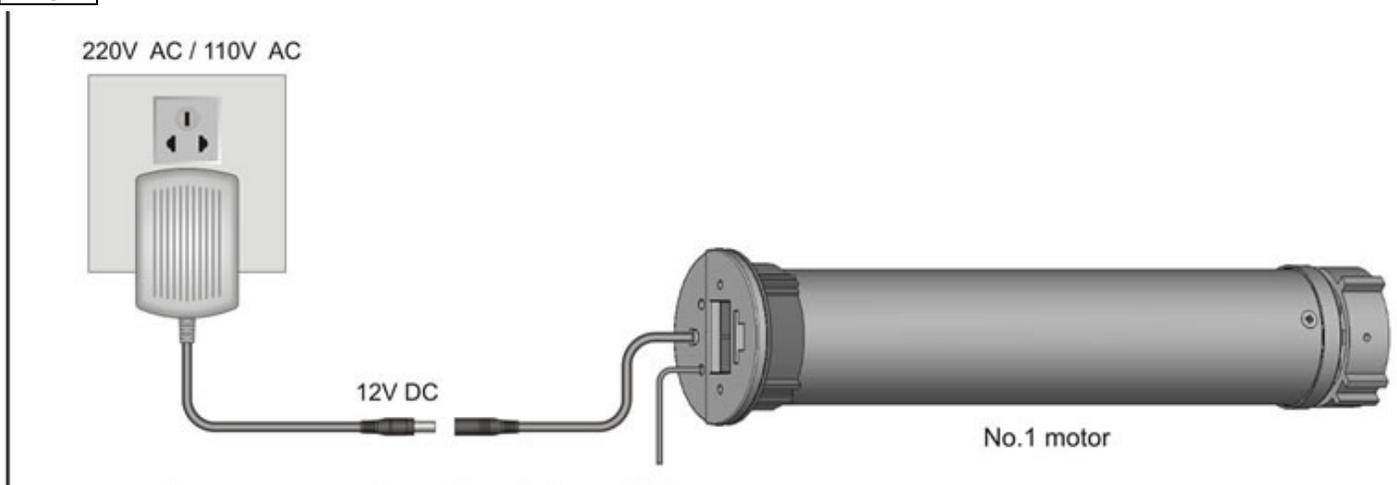


Connect the power to the Motor, within 20 seconds, there will be a short whistle which means it is in programming mode.

The Programming Mode will last for 20 seconds for EACH step.

If there is no action taken within 20 seconds in any step, or a mistake during the course of programming, it has to start all over again from the beginning (i.e. power must be off for 30 seconds, then connect it and wait for a short whistle).

Step 2

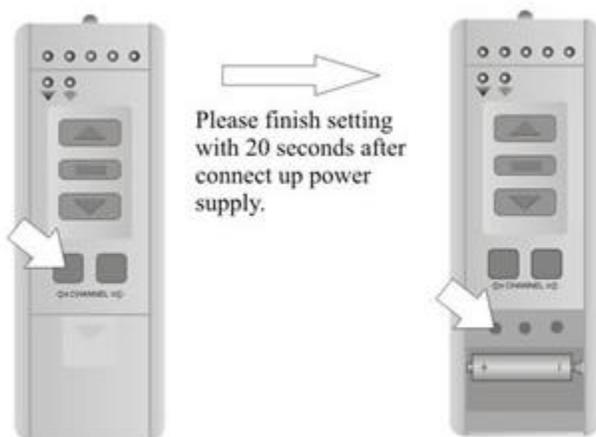


Press left/right **Channel** button to turn channel# 1 light on (or any channel number that you like)


Press and hold **SET** button till it sounds a long whistle from short beeps.

Setting Lower/Upper Limits

First, set the Lower Limit as the Shade is rolled up when mounted.

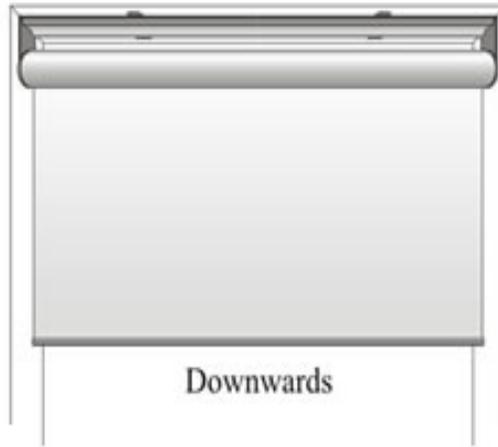

Step 3

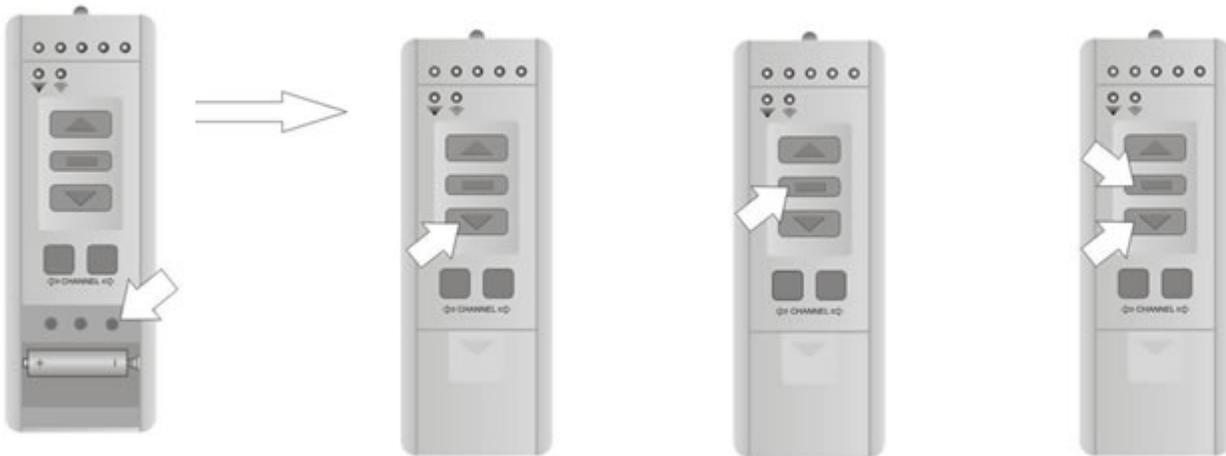


Press **SET** button for a few seconds till it changes short whistles to a long whistle

Press **Down** button once and the Shade will keep moving down.

Press **STOP** button once when the Shade drops to the position desired.

Press **STOP** button first, then the **DOWN** button at the same time till it sounds a long whistle. (usually within 1 second)

Step 4

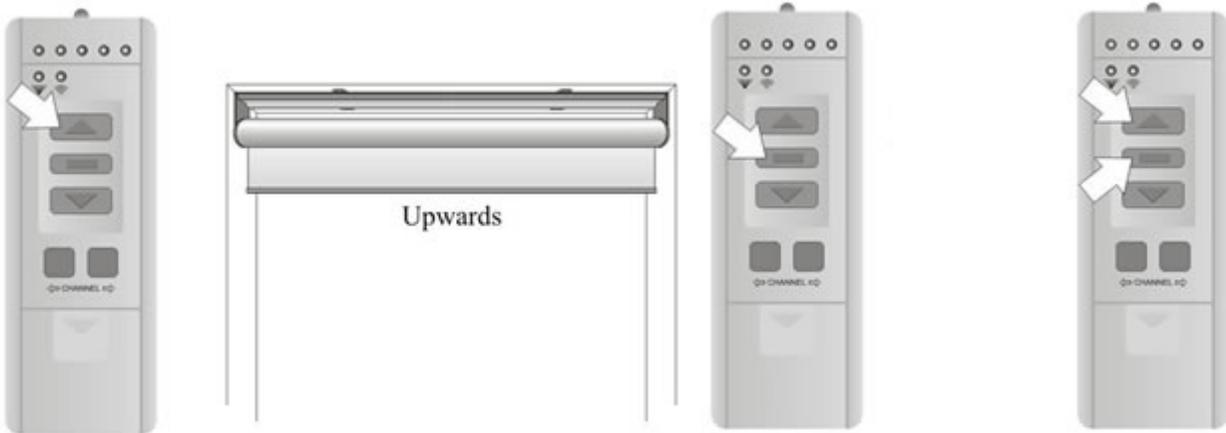

Press **UP** button once the Shade will keep moving up.

Press **STOP** button once when the Shade is at the position desired.

Press **STOP** button first, and then the **UP** button at the same time till it sounds a long whistle. (usually within 1 second)

Done

Other Functions:

Changing the Rolling Direction

Press UP and DOWN positions at the same time, loose two buttons when there sounds a long whistle. Then the position is changed.



Remarks:

This function should be done before programming the upper/lower limits. Otherwise, you may have to program the upper/lower limits again as these limits might not be the same when they are reversed.

Clear All Programming

Step 1

Power off the Motor for 30 seconds, then connect it and wait for a short whistle.


Step 2

Press STOP and SET buttons together till it sounds a long whistle. All previous works are cleared. You may continue to Step 2 for programming if wanted.



Operate All Channels

Channel indicator light

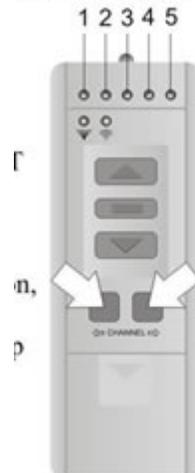

Press LEFT and RIGHT Channel buttons at the same time, all channel lights will be on. Press UP/DOWN button to operate all systems.